




# SELF-STRIPPING MAINLINE-TO-SERVICE CONNECTOR

## INSTALLATION INSTRUCTIONS

**PART# 3WB-SS**

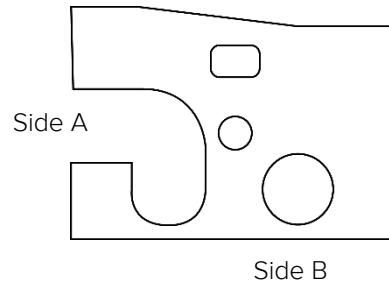

1. Remove plastic tubing from side A and discard.
2. Place unstripped mainline tracer wire into side A.
3. Using finger pressure, press blade holders into housing until there is contact with mainline tracer wire.
4. Insert unstripped service tracer into Side B until visible against stop on opposite side.
5. Using 8"–10" Straight Jaw, Groove Joint Pliers, individually press blade holders into housing until blade holder is fully seated in housing. Verify top surface of blade holder is even or just below the top surface of the housing.
6. Remove sealant cover and discard.
7. Close housing, aligning conductors until housing lid is fully latched.
8. Wipe excess sealant around wires.

Do not reuse.

Do not pull on wires after connection is made.