



MAMBA TRIAD MARKER POST

INSTALLATION INSTRUCTIONS

PART# MAMBA-TRI-M-*

1. Dig hole 18" deep by 6" wide (Fig 1).
2. Place post into ground (Fig 2).
3. Backfill dirt and tamp (Fig 3).

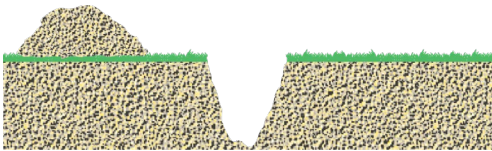


Fig. 1

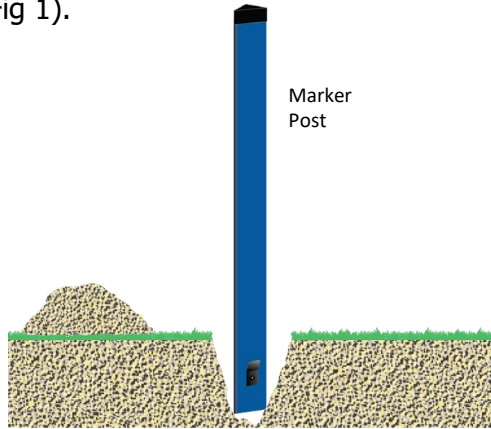


Fig. 2

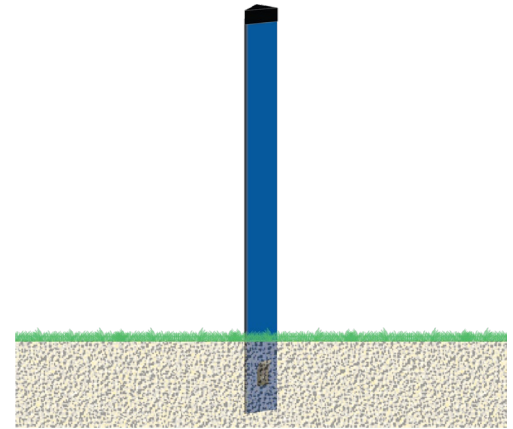


Fig. 3